

TEVION®

User Guide

DAB and FM Radio

With Clock, Alarm & Snooze Functions



Now you have purchased a Tevion® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated helplines and web support

AFTER SALES SUPPORT



GB 01270 508538 1800 995 036

www.quesh.co.uk

MODEL NUMBER: 48451

DAB AND FM RADIO

POWER ADAPTOR

EARPHONES

3

YEARS
WARRANTY

Contents

1

1. Contents
2. Welcome Section
3. General Information and Safety Instructions
4. Controls
5. Instructions
6. Warranty Card

Welcome Section

2

Congratulations!

You have made an excellent choice with the purchase of this quality Tevion® product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety , supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Tevion® product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated helpline.

We hope you enjoy using your product for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty please telephone our helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have a satisfactory proof of purchase (keep your till receipt safe!). This does not affect your statutory rights. However be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.

General Information and Safety Instructions 3

This DAB radio can be powered by 6 x AA batteries.

Do not dispose of batteries in your household waste.



Please contact your local authority for details on safe disposal.

- Never throw batteries into a fire or expose to excessive heat sources.
- If batteries are swallowed, please seek immediate medical attention.
- Always ensure correct +/- polarity when installing batteries.
- Do not recharge non rechargeable batteries.




Electrical and electronic equipment (EEE) contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) is not disposed of correctly.

Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

Controls

4

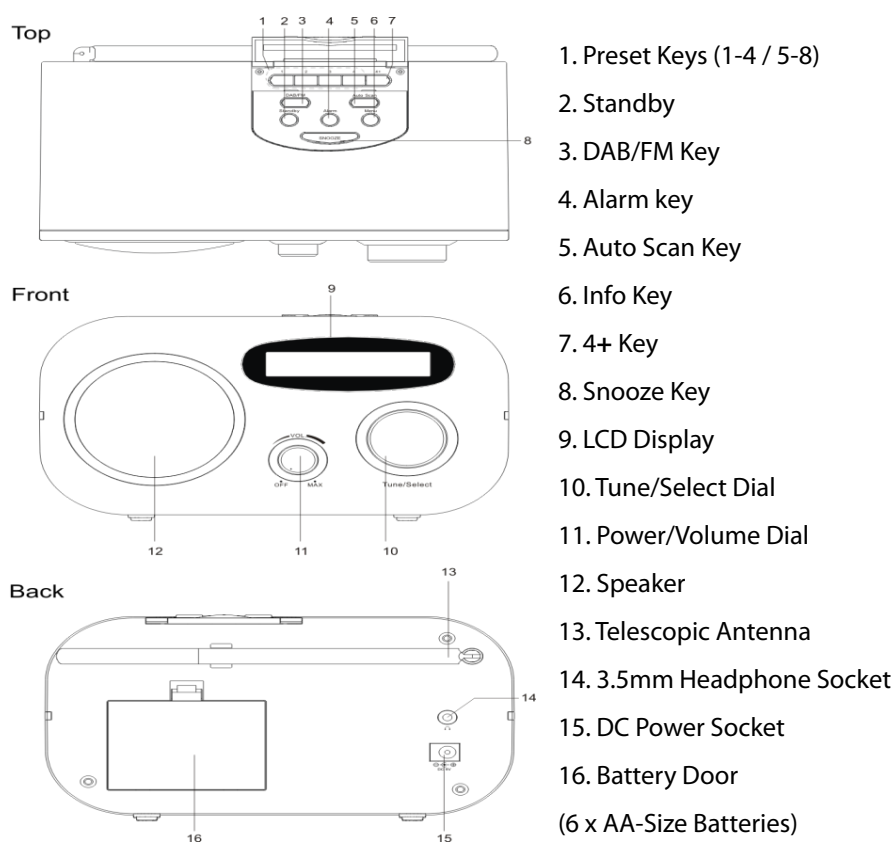

Instructions

5

Switching your radio on for the first time

1. Connect the mains adaptor to the DC power socket of the radio and to the power supply from the wall socket.
2. Extend the aerial as far as it can go.
3. The radio will automatically show.



4. The radio will now sync, as you will see on the LCD display.
5. The device will be checking the time by DAB signal, this can take up to 10 seconds.




6. It takes around 2 minutes to search for DAB stations. if there are no stations available it will display "SYNC FAIL". If you press the Tune/Select button anytime during the scan, this will cancel the procedure. The time will also show incorrectly, and "SYNC FAIL" will appear on the screen again.
7. If there is no DAB signal, or cancel the scan using the Tune/Select dial, the LCD will display "NO SERV"



8. During scan mode, the LCD will display a slide bar that indicates the progress of scan and the amount of radio stations that have been found so far.



7. Once the scan has finished, the radio will select the first alphanumerically found station.

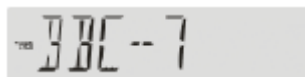

If you cannot hear any sound, check the volume is switched on.

To explore the stations that have been found, you need to turn the "Tune/Select" button anti-clockwise or clockwise. Every time you turn the tune knob, you will skip to the next found station. When you find a station that you would like to listen to, then press the "Select" key, after 5 Seconds, it will auto select the current station which will be shown on the LCD .

8. There is no DAB signal, you can find the station information which you have previously listened to, it will display as "OFF AIR"




Memory

When you switch on the radio, the radio will play the DAB mode with the station that was in last operation or the FM radio that was last in operation.


DAB Mode

1. Storing Stations - You can store up to 8 of your favourite stations to the preset keys. This will enable you to access your favourite station at the touch of one button. To store a preset, you must first be listening to the station that you would like to save, then press and hold one of the presets labeled 1-4 for 2 seconds. The LCD will then show "**P# SAVED**". If you want to save Radio 2 to Preset 5, you should press and the "4 +" key to switch the Preset 1-4 to Preset 5-8 station, then press and Hold the number 1 button at the same time until "**P# SAVED**" appears in the display.

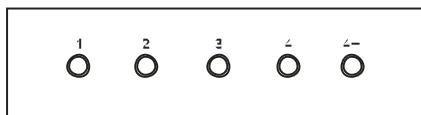

2. Recalling a stored station. Once you have saved a station to one of the presets, you can recall it by pressing and releasing the corresponding preset key, e.g. if you saved Radio 1 to Preset 1, then just press the number 1 preset key. If you press a preset that hasn't been allocated a station, then it will display "EMPTY". If you want to call "preset 5", you should press and hold the "4 + " key, and then press number 1 button.

3. Display mode

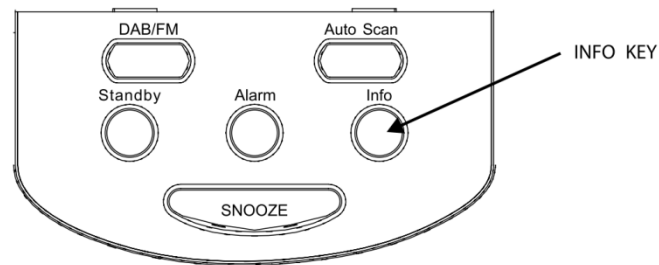

When you press the "Info" button, the display will cycle through the following display modes



1. Signal strength. The slide bar indicates how strong the received signals are, the stronger the signal, the longer the bar will be from left to right.



SHOWS THE SIGNAL STRENGTH

If the signal level drops below the fifth box (minimum signal level) then you may experience problems with the quality of the audio.

Note: This signal strength is only for indicating DAB stations strength.

2. Advanced display modes
3. Auto scan modes

There are two types of auto scan, LOC (LOCAL) scan and the other is FULL scan. LOC scan searches the local DAB bands III in your area and FULL scan searches all UK band III DAB channels.

To activate the LOC scan press the "Auto scan" button and for FULL scan press and hold the "Auto scan" button.

4. Manual tune

As well as an auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

Press the "Info" button and turn the "Tune/Select" key to move the menu, when the LCD display shows "manual". Then press the "Tune/Select" key to enter into manual tune mode. Now turn the "Tune/Select" button to move through the DAB channels, which are numbered from 5A to 13F.

5. Set clock. Under DAB mode, the clock will synchronize automatically and you do not have to adjust the clock manually. Turning the volume button to the 'off' position will turn the radio off and cause the clock to reset. Please set the clock again when you turn on the radio. The stored preset stations will not be affected. If the radio is in FM mode, the clock needs to be set manually by pressing the "Info" button once. The "SET CLOCK" menu will appear. Press the "Tune/Select" button to confirm.
6. AUTO CLK. The device will check the time automatically.
7. MANUAL CLK. Adjusting the tuning dial to set the hour and time. To confirm the change, press the "Tune/Select" button.
8. SLEEP. To set sleep time from 05 to 60 minutes, choose OFF to close the "Sleep Time" setting.
9. Time. This will display the time on-screen.
10. CH Freq . This will display the current station frequency.
11. Station . This displays the name of the station they are listening to.
12. Version. This is the software version number. You may be asked for this number if you encounter problems and need assistance.

13. System Reset. Press and hold the "Info" button for 3 seconds. The display will show "RESET". There may be times when you need to reset your receiver back to its original factory settings i.e. when you move the radio to another part of the country. So that you can pick up the local & national DAB stations in that area. If you don't do this, then when you select a station on the radio, it may no longer be available.
14. Reset procedure. Press the "Tune/Select" key to confirm to start the Reset. Please note that once the reset has taken place, you will lose all of your stored presets both DAB and FM, and the internal DAB registry.

FM Mode

1. Switching from DAB to FM, In order to switch the radio from DAB to FM mode, you need to press the " DAB/FM " button once. The display will show :



2. Auto Scan. To search for FM stations, you need to press and then release the "Autoscan" button. This will start scanning up the frequency band. To scan up/down the frequency band, you need to Turn the "Tune/Select" key up/down first, then press the "Autoscan" button. Once a station has been found, the scan will stop automatically. If no station is found, then the scan will stop once it has cycled through the entire FM band (87.5-108MHz).
3. When you press the "Info" button In FM mode, The display will cycle through the following options:
4. Clock
5. Time
6. Version

Alarm Mode

1. Check Alarm Status. Under the condition of listening to the radio, press the "alarm" button, the LCD will display the alarm mode.

The image shows a digital LCD display with the text "ALARM 1" in a stylized, segmented font.

Turn the "Tune/Select" button to set ALARM 1 or ALARM 2

The image shows a digital LCD display with the text "ALARM 2" in a stylized, segmented font.

Press down the "Tune/Select" button, and turn the dial to select "ON" or "OFF". Choose "OFF" to disable the alarm and return to the radio function. Press the "Tune/Select" dial on "ON" to turn the alarm on, you will then need to turn the dial to choose between "BUZZ", "DAB" or "FM". Choosing "BUZZ" will set the alarm to a standard alarm tone, "DAB" will turn on the DAB radio at the time of the set alarm, "FM" will turn on the FM radio at the alarms set time.

The image shows a digital LCD display with the text "WAKE BUZ" in a stylized, segmented font.

Press down the "Tune / Select" key to confirm the select.

For Radio Alarm, it plays the DAB or FM station that you tuned to before you turned off the radio at the same volume level, if you don't receive any DAB station on DAB mode, the alarm function cannot be activated on DAB mode.

2. Setting Alarm Time. Select "ON" and Press down "Tune/Select" button to Set Alarm's hour, turn "Tune/Select" button to change the hour.

The image shows a digital LCD display with the text "1:00 AM" in a stylized, segmented font.

3. Press down "Tune/Select" button to Set Alarm's minute, turn "Tune/Select" button to change minute.



4. Press down "Tune/Select" button to Set Alarm's repeat mode, turn "Tune/Select" button to change repeat mode. "DAILY " or "ONCE".



5. Press down "Tune/Select" button to confirm the Alarm setting. The display will return to the Radio Frequency screen. Press the "Standby" button when you want to activate the Alarm.



When in standby mode, press the "Alarm" button to set the alarm

6. When Alarm is Triggered. When the Alarm is set to "BUZZ", the "BUZZ" sound will be activated for 60 minutes when the Alarm is sounding, you can press the "STANDBY" key to cancel the alarm.
7. When the Alarm is set to DAB or FM, the DAB radio will switch from standby mode to Radio mode when the alarm starts. The alarm will last for 60 minutes. Press the "Standby" key to cancel the alarm or return to standby status.

Snooze Function



1. To enable the Snooze feature, press the "Snooze" button after the alarm starts. The alarm will turn on every 5 minutes if the snooze function is activated.
2. Press "STANDBY" key to Cancel Snooze Function.

Standby

If you press "Standby", the LCD display will show "Goodbye" and the clock will appear. In standby mode, the device is dormant; pressing "Standby" again reactivates the radio. You can also set the alarm in Standby mode by pressing the "Alarm" key.

System Reset

Refer to page 11.

Signal Not Available

When there is no signal received after the Autoscan has been done, the display will show "OFF AIR". It may be due to a weak signal. Please check if the Aerial has been pulled out and try again.

Should you experience any technical difficulties, in the first instance please call our customer support team on the number below as most issues can be resolved quickly over the telephone.

TEVION®

Warranty Card

DAB and FM Radio

48451

Please keep your purchase receipt together with your warranty card

Name _____

Address _____

☎ _____

Date of purchase _____

Location of purchase _____

Detailed description of malfunctions:

SERVICE HELPLINE

Qesh Ltd, 1 Solway Court, Crewe Business Park, CW1 6LD

UK/N.Ireland 01270 508538, Rep.Ireland 1800 995 036

web: www.qesh.co.uk

AFTER SALES SUPPORT



GB 01270 508538 IRE 1800 995 036



www.qesh.co.uk

MODEL NUMBER: 48451

DAB AND FM RADIO

POWER ADAPTOR

EARPHONES

3

**YEARS
WARRANTY**